


INSTALLATION INSTRUCTIONS

BALANCING VALVES WITH PROPRESS/PROPEX FITTINGS

CS-PP & CSU-PP/CS-PX & CSU-PX

- 1) We recommend that you use a shut off valve before and after the **CircuitSolver®**. A union should be used after the CS-type **CircuitSolver®**. See schematic diagram below.
- 2) Install the valve in the proper flow direction as indicated by the arrow on the valve body. This is especially critical for valves equipped with an integrated check valve. The valve may be installed in either a horizontal orientation or in a vertical orientation with flow directed upward.
- 3a) **CircuitSolver® Models ending in -PP:** When using Viega ProPress® adapters, please consult the Viega ProPress Installation Manual for proper installation, tools, etc.
Visit <https://www.viega.us/en/products/ProPress/Downloads.html>
- 3b) **CircuitSolver® Models ending in -PX:** When using Uponor ProPEX® adapters, please consult the Uponor ProPEX® Installation Manual for proper installation, tools, etc.
[https://www.uponor.com/en-us/products/fittings/metal-fittings/propex-lead-free-\(lf\)-brass-male-threaded-adapters](https://www.uponor.com/en-us/products/fittings/metal-fittings/propex-lead-free-(lf)-brass-male-threaded-adapters)
- 4) CircuitSolver® valves are designed to be installed at the end of each domestic hot water supply just prior to the return line. *See diagram below.*
- 5) For water systems with particulate/dirt problems, consider using a strainer if one is not already used upstream.
*Strainer must be maintained in order to avoid flow obstruction.
- 6) The CircuitSolver® valve is designed for use exclusively with fluids that are compliant with U.S. EPA National Primary and Secondary Drinking Water Regulations or the Canadian Drinking Water Quality Guidelines.


MULTI-BRANCH PARALLEL PIPING CIRCUIT:

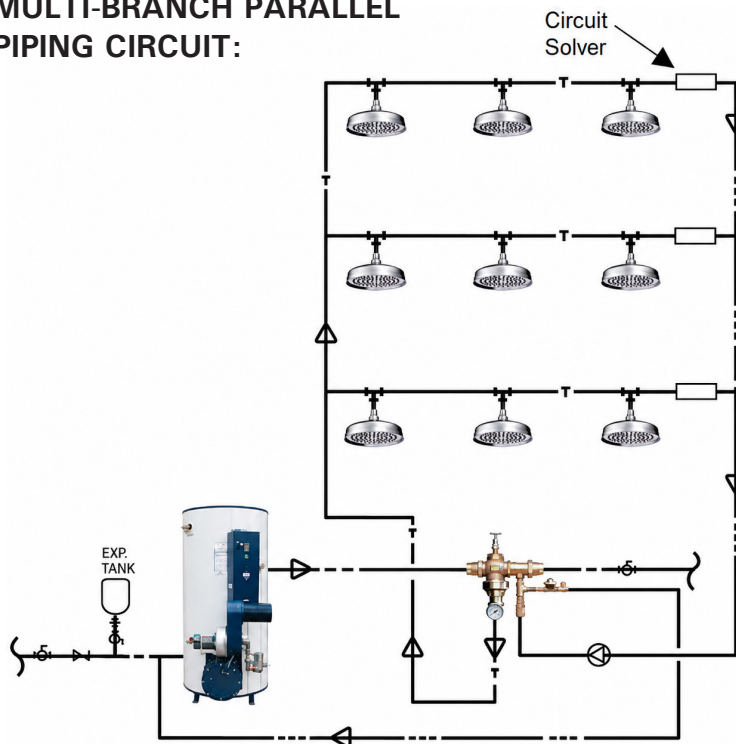


Buy American to Build America®

SCHEMATIC DIAGRAMS

CircuitSolver® with ProPress/ ProPEX Ends (CS-PP/ CS-PX)

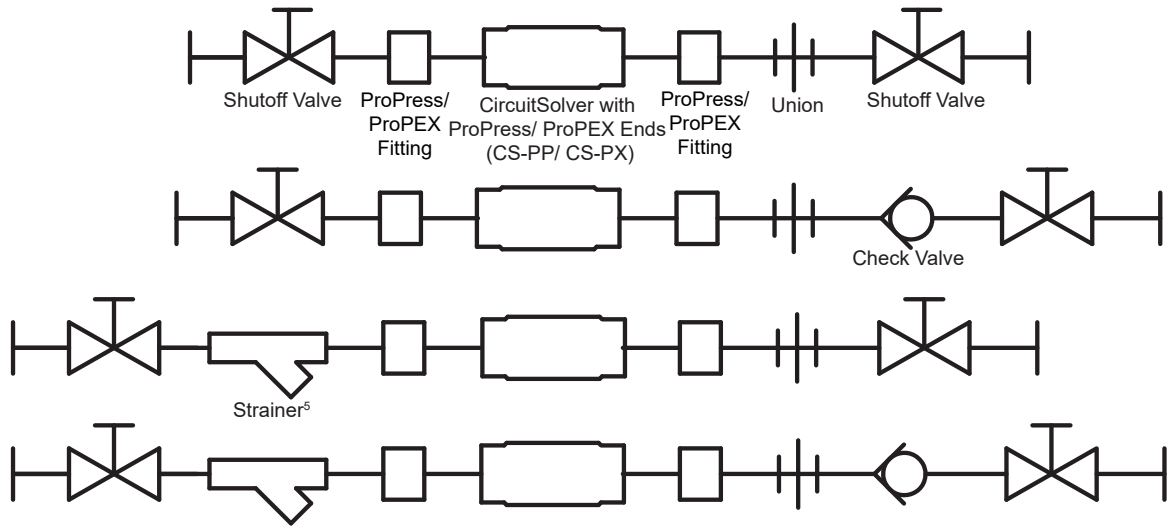

CircuitSolver® Union with ProPress/ ProPEX Ends (CSU-PP/ CSU-PX)

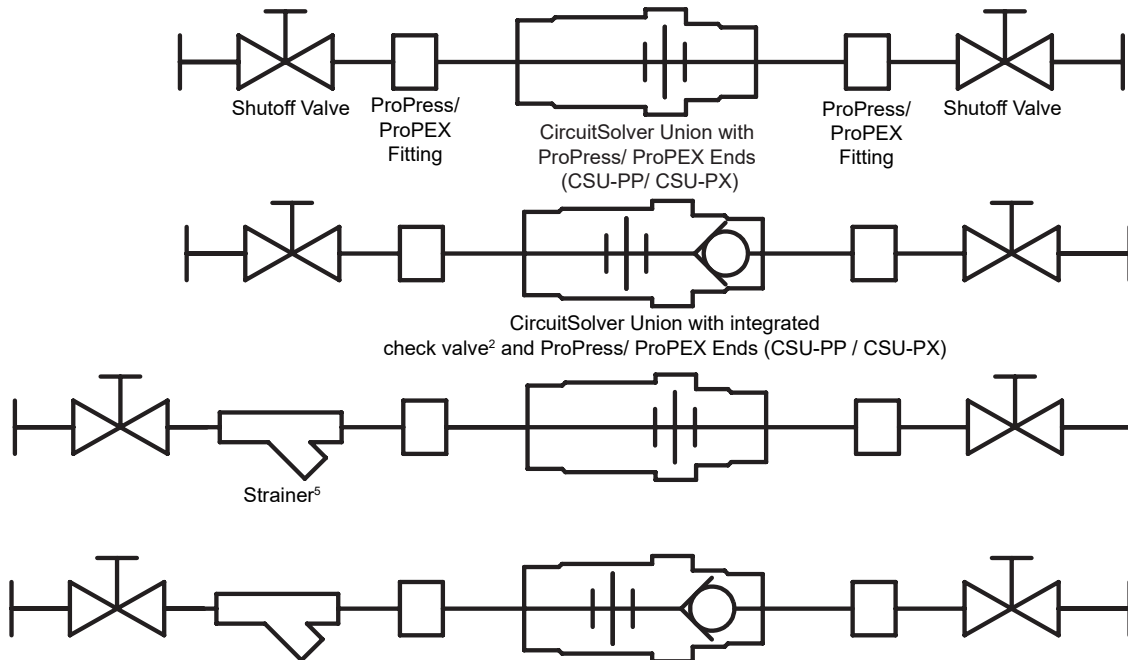

ProPress® and Viega® are registered trademarks of Viega and ProPEX® and Uponor® are registered trademarks of Uponor

Proper Use: Use ThermOmegaTech® products only as specified to ensure performance, safety, and regulatory compliance.

No Modifications: Do not modify ThermOmegaTech® products, as changes may void warranties and violate regulations (e.g., RoHS, REACH).

Proper Disposal: Dispose of end-of-life products per local hazardous substance regulations; contact ThermOmegaTech® or recycling facilities for guidance.

 **WARNING:** This product can expose you to chemicals, for example lead, nickel, acrylonitrile, which are known to the State of CA to cause cancer, birth defects, or reproductive harm. For more information, go to www.P65Warnings.ca.gov

Warranty information disclosed at www.thermomegatech.com/terms-conditions/

CS-PP & CSU-PP/
CS-PX & CSU-PX_IMI
REV: 7/28/2026